TEAC

# PR192

## Portable AM/FM Radio

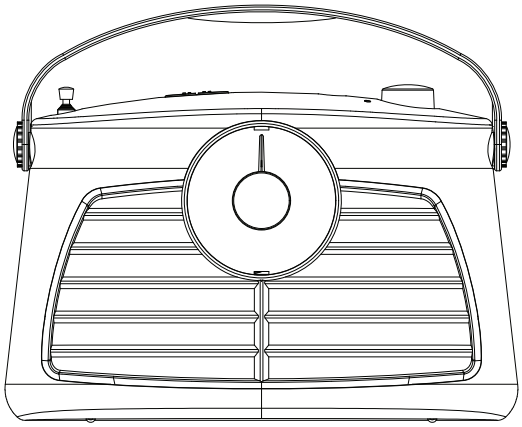

# USER MANUAL

# IMPORTANT !

WARRANTY INFORMATION INSIDE. PLEASE READ

Trademark of TEAC Corporation JAPAN

www.teac.com.au

# TEAC WARRANTY PROCEDURE

v1.1: Mar 2014

Please read the owner's manual carefully and ensure that you have followed the correct installation and operating procedures.

1. Please read this warranty card.
2. Keep your purchase receipt to enable you to proceed quickly in the event of a Warranty Service.
3. If you require Warranty Service, please contact the TEAC Warranty Service Hotline at 1300 553 315 for assistance. Please ensure that you have the model number, serial number and purchase receipt ready when you call.

Please complete the section below and keep this information for your own records.

Name _____

Address _____

Postcode _____

ame/No. Serial No. _____

Name _____

Address _____

Postcode _____

## Thank you for selecting a TEAC product.

If your TEAC product malfunctions, please call us directly for warranty support between Monday to Friday at 8.30AM – 6PM AEST at the

## TEAC Warranty Service Hotline

# 1300 553 315

For other enquiries, please contact us at:

support@teac.com.au

www.teac.com.au

When calling to receive warranty service, please have:

1. **Your model and serial number**
2. **Proof of purchase**
3. **And your product in front of you**

NOTE:

- You are required to provide a copy of your receipt in order to have your claim processed.
- You can check whether your product is entitled to a 3-year warranty on www.teac.com.au
- Please read the Terms and Conditions for details of your warranty entitlement.

# TEAC TERMS AND CONDITIONS

v1.1: Mar 2014

**Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.**

1. TEAC warrants that this product is free from defects in material and workmanship under normal domestic use with reasonable care and skill. Maintenance and cleaning (i.e. laser head) is not covered by this warranty. The TEAC warranty only applies to 2014 TEAC products purchased NEW from a TEAC Authorised Retailer in Australia. This warranty only applies to the original purchaser and cannot be transferred.

2. The benefits to the consumer given by this Warranty are in addition to other rights and remedies of the consumer under a law in relation to goods or services to which the warranty relates, being the Australian Consumer Law.

3. Refund or replacement via your TEAC Authorised Retailer is available for a period of 14 days after purchase for goods that have been inspected and determined to have a major failure. Refund and exchange is not applicable for change of mind.

4. Subject to the terms herein, this warranty effectively covers TEAC product models released in 2014, excluding products purchased for commercial purposes, as specified in the Warranty Periods Table below from the date of purchase. TEAC models released before 2014 shall be covered under TEAC Warranty v1.5.2 (DEC 2011). Commercial use products are covered for 12 months only (Authorised Service Centre).

| **TEAC PRODUCT excluding commercial use products** | **SIZE (TV)** | **WARRANTY PERIOD from date of purchase** | **WARRANTY SERVICE TYPE** |
|---|---|---|---|
| LED/LCD TV (Without built in Blu-ray / DVD player) | 42" and above | 0 to 12 months | In-home service* |
| | | 13 to 36 months | Authorised Service Centre Service |
| | 32" to 40" | 36 months | Authorised Service Centre Service |
| | Below 32" | 12 months | Authorised Service Centre Service |
| LED/LCD TV (With built in Blu-ray / DVD player) | 42" and above | 12 months | In-home service* |
| | 19" to 40" | 12 months | Authorised Service Centre Service |
| All other TEAC products | N/A | 12 months | Authorised Service Centre Service |

Please refer to www.teac.com.au for verification of 2014 models.

5. In Home Service/Pick up* Service
   This service will only be provided as part of this warranty if all the following conditions are met;
   a) The product is indicated in the Warranty Period Table.
   b) The product is within the warranty period.
   c) The product is located within the normal service area of the local TEAC Authorised Service Centre.
   If TEAC determines that the product is not repairable on site, TEAC can complete the repair by taking the product to a TEAC Authorised Service Centre.

   Authorised Service Centre Service
   The purchaser is required to send the product at their own expense to the nearest TEAC Authorised Service Centre for repair. In this event, proof of purchase is required to support a warranty claim. After the repair, the product will be available for collection by or return to the purchaser at a fee upon request. TEAC in-home service can be made available at a fee upon request.

6. A 12-month replacement warranty is applicable to all Accessories such as Remotes, Power Adapters and Cables.

7. TEAC will ensure to the best of its abilities that all required parts are made available for any required service/repair.

8. TEAC Australia Pty Ltd and its Authorised Service Centres will use their best endeavours to complete product repairs within a reasonable period based on available resources and workload during the time when service is requested and performed.

9. Refurbished parts may be used to repair the product. In the case of a replacement, the product may be replaced, with a refurbished unit of the same type or, if one is unavailable, a similar refurbished model with equal or better features and specifications.

10. Please be advised that if the product presented for repair is capable of retaining user-generated data, the data may be lost during servicing. Customers are strongly encouraged to back up all important information/data before sending the product in for service/repair.

11. Service will be provided only during normal business hours and under safety conditions and circumstances. TEAC and its authorised service agents can refuse any repair if safety, in relation to OH&S, becomes a concern to its staff or authorised service agents' personnel.

12. The warranty is void and warranty claims may be refused, subject to the Australian Consumer Law, if:
    a) The product was not transported, installed, operated or maintained according to manufacturer instruction, or
    b) The product was abused, damaged, tampered, altered or repaired by any unauthorised persons, or
    c) Product failure is due to accidents during use, installation or transit, power surges, use of defective or incompatible external devices, exposure to abnormal conditions such as excessive temperatures or humidity, or entry of liquids, objects or creatures into the product, cockroach infestations, or
    d) The customer is unable to provide proof of purchase of the product for verification, or
    e) The serial number of the product is missing or has been tampered with.

13. Where any repairs or services required that are outside of the terms and conditions of this Warranty are requested by the customer, or where a fault is determined to be outside of the terms and conditions of the Warranty during an In-Home Service call, the customer shall be charged for the cost of the repair and/or the In-Home service call fee.

14. No one is authorised to assume any liability on behalf of TEAC or impose any obligation on it, in connection with the sale of any equipment other than as stated in this warranty and outlined above.

15. TEAC and/or its Authorised Service Centres reserve the right to inspect and verify whether the product is exhibiting a major failure as claimed by customers/retailers.

16. LCD dead pixel policy, please contact TEAC at support@teac.com.au for assistance.

**SAFETY PRECAUTIONS**

* Place the unit so there is always enough space for free air circulation around it (at least 5cm gap) and the air inlets are not obstructed.
* The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
* The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
* No naked flame sources such as lighted candles should be placed on the apparatus.
* When replacing the battery, be sure to dispose of the old one in accordance with the current regulations. To this end, deposit it at a point which has been provided for this purpose, in order that it will be disposed of in a safe and environmentally-friendly way.
* The apparatus can be worked regularly between 10 to 40°C.
* To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
* The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
* Excessive sound pressure from earphones and headphones can cause hearing loss.
* The marking plate are indicated on the back side of the unit.
* The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
* To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains.
* The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.
* Battery shall not be exposed to excessive heat such as sunshine, fire or the like. Excessive sound pressure from earphones and headphones can cause hearing loss.

**NOTE**

Mains plug is used as the disconnect device and it shall remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug shall be disconnected from the mains socket outlet completely.

## CONTROL AND THEIR FUNCTIONS

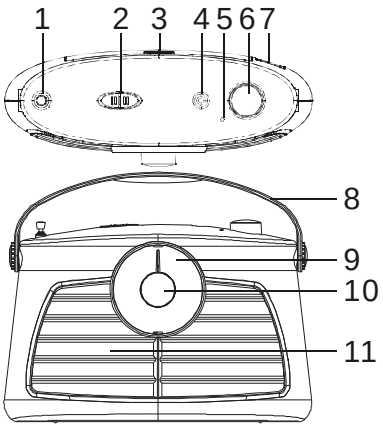


1. Rod Antenna
2. FM/AM Band Switch
3. Battery Compartment Door (at the back)
4. Phone Jack
5. Power On Indicator
6. Volume Knob / On/Off knob
7. AC Socket (at the back)
8. Handle
9. Dial Scale
10. Tuning Knob
11. Speaker

## POWER SOURCE

### BATTERY POWER OPERATION

1. Open the battery compartment door by pushing the catches downwards.
2. Install 4 x C Size batteries carefully according to the +/- polarities marked in the battery compartment.
3. Close the battery compartment.

### AC POWER OPERATION

Connect receptacle end of the mains lead to the AC socket and the plug to an AC outlet.

### OPERATION

1. Turn the Volume Knob / On/Off knob clockwise until you hear it click, the radio will turn on.
   The Radio On Indicator will light up.
2. Select the desired radio band with the Band Switch.
3. Tune in a desired station by rotating the Tuning Knob.
4. For FM reception, pull out the antenna and adjust the direction, length and angle to receive the best reception. For AM reception, turn the unit around to find the best reception.
5. Adjust the Volume Knob / On/Off knob for your desired listening level.
6. To turn off the radio, turn the Volume Knob / On/Off knob anti-clockwise until you hear it click.
   The Radio On Indicator will turn off.

**PHONE JACK**

For private listening connect a headphone (not included) with a 3.5mm plug to the Phone Jack. The built-in speaker will be automatically disconnected.

**NOMINAL SPECIFICATIONS**

| | | |
|---|---|---|
| Power Sources | : | AC240V ~ 50Hz |
| | | DC6V (4xC Size Batteries - not included) |
| Power Output | : | 500 mW RMS |
| Frequency Range | : | FM 88-108 MHz |
| | | AM 540-1600 KHz |
| Frequency Response | : | 125 Hz-6KHz |
| Dimensions | : | 210(L)x80(W)x139(H) MM |
| Weight | : | 0.48 KG |

Weight and dimensions are approximate because we continually strive to improve our products, specifications may change without prior notice.

# TEAC

**In the event of a product failure within the warranty period, please call the**

## TEAC Warranty Service Hotline

## 1300 553 315

**Between Monday to Friday - 8.30AM to 5PM AEST**

***Please have your purchase receipt and the product's serial number ready**

**For other enquiries and support please email**
**support@teac.com.au**